



DIGITAL-MAG60

care and maintenance instructions for non-dryerase surfaces

As with any quality product, proper care and maintenance of your wallcovering will safeguard your investment by helping it to maintain its original beauty and finish; thereby extending its useful life.

The following general cleaning and maintenance instructions should serve as a guide for normal maintenance practices.

general cleaning

Ordinary dirt and smudges can be removed by using a 2% mild dish soap solution, warm water, and a sponge or soft cloth. Clean from the bottom of the wall upward and allow to soak for several minutes. Rinse thoroughly from the top of the wall down using clean water and a clean sponge (change rinse water often). Dry wallcovering with a soft, lint-free cloth or towel. Repeat, if necessary.

special cleaning conditions

For more difficult stains that are only surface deep, isopropyl (rubbing) alcohol is recommended. Stains should be removed as quickly as possible to eliminate any possible reaction between the staining agent and wallcovering. Timeliness is especially important for removing stains that contain colourants or solvents such as ball point ink, lipstick, etc. Remove as much as possible first if it is caked on and then rub gently from the outside edge of the stain to the center to prevent spreading of the stain. Repeat, if necessary.

PLEASE NOTE: This is a digitally printed product - therefore when washing, a vertical motion is recommended.

Never use abrasive cleansers or steel wool as they will mar the surface. Do not use solvents such as nail polish remover as they will remove the topcoat finish.

When using rubbing alcohol, first test on an inconspicuous area. Never mix cleaning agents together - toxic vapours may be produced.