


1. Examine goods to assure quantity and quality is as ordered. Lay out the work to be completed, including all parts, along the base of the wall. The parts will include those supplied by **walltalkers**® and those the installer must supply. **walltalkers** supplies the extruded aluminum housing, the interior roller system, mounting brackets with hardware, and end caps in the quantities ordered. The installer will supply masonry anchors and manufacturer specified hardware for concrete and block walls. Use drywall anchors at areas where wood or metal studding is not easily accessed.
2. Measure, mark, and cut the paper rail to size. Use a miter saw with a fine tooth carbide tip blade. Cut the factory edge off one side of the aluminum extrusion. Place an end cap on the end of the aluminum just cut. Measure and mark the finished length on the aluminum, deduct 1/16" for the second end cap. Put the system of rollers within the aluminum, remove one full roller to compensate for each end cap insert. Cut the aluminum at the length mark. Attach the second end cap.
3. Place the aluminum extrusion on the wall at the desired location. Use a level to assure a good finished look. With a pencil, make a very light mark on the wall at the bottom of the aluminum, one near each end. Measure up 1 3/8" from each pencil mark and make another mark. Use a chalk line, or a straight edge and pencil to connect the highest set of marks made on the wall. Locate the metal or wood studding along the level line and mark on the wall, no greater than 32" on center. Drill a 1/16" diameter hole at each mark made on the wall.
4. Mount the plastic clips to the wall with the supplied flat head 7/8" screws, the barbs should point upwards at a slight angle. Similar sized screws and wall anchors may be used in areas where studding or solid backing is not easily accessible.
5. Mount the aluminum extrusion, making sure the open slot with the rollers exposed is facing down. Align the open slot on the back of the extrusion with the barbs of the plastic clips. Press the aluminum in tight, the barbs will lock in.

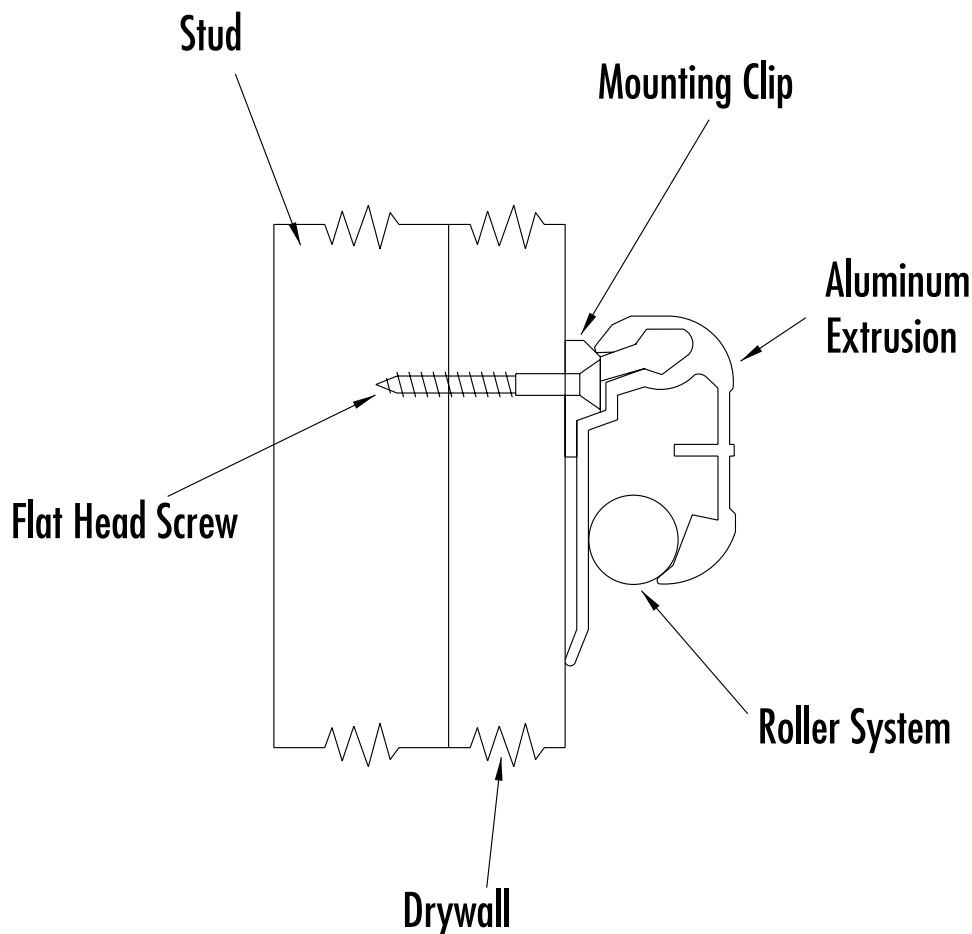

paper rail installation instructions

www.walltalkers.com

walltalkers

a division of RJF International Corporation

3875 Embassy Parkway
Fairlawn, OH 44333

PH: 800.820.9255 • Fax: 330.668.7703

7075APR1111 5/01