



TackNow

Trim Installation Instructions

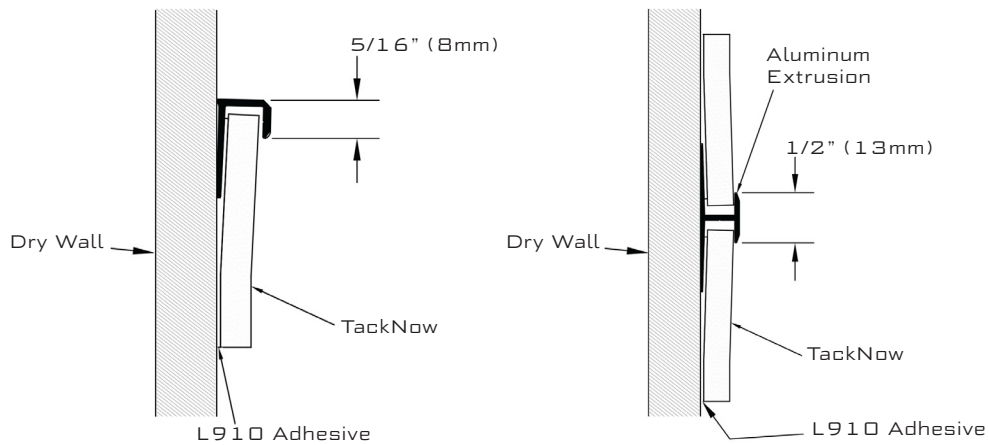

J Trim

H Trim

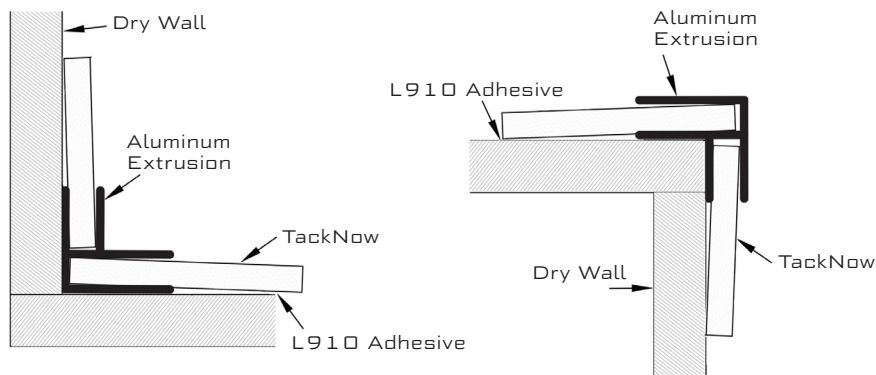

Inside Corner Trim

Outside Corner Trim

Aluminum trim shall be fastened with self-tapping drywall screws and bonded with L910 adhesive or contact cement.